

ON-DEMAND OUTDOOR SHOWER

Camper Use Instructions, Safety Warnings & Use-at-Own-Risk Notice

WARNING: Outdoor portable propane appliance. Use only for its intended purpose. Never use indoors or in an enclosed area. Do not use near flammable vapours, fuels, smoking, open flame, tents, vehicles, or dry combustible material. If you smell gas, hear hissing, see damage, or the unit does not light properly, stop use immediately, turn off the gas cylinder valve if safe, leave the area, and contact the campsite owner or call 911 if urgent.

Instructions on How to START the Shower:

- 1 Confirm the shower is outside in open air and the area is clear of fuel, aerosol sprays, campfires, smoking, dry grass, towels, children, and pets.
- 2 Turn on the water supply. Keep the shower head/output in the OFF position before opening gas.
- 3 Open the propane cylinder valve slowly. If gas odour is detected, close the valve immediately and do not use.
- 4 Set **WATER control to maximum** flow and **GAS control to minimum** heat before lighting.
- 5 Turn the shower head/output ON. You may hear clicking as the burner ignites. If the burner does not ignite promptly, turn the shower/output OFF, close the gas valve, and do not retry repeatedly.
- 6 Test water temperature with your hand before entering the spray. Adjust slowly. Increased gas makes water hotter. Increased water flow usually cools the water.

SHUTDOWN Instructions:

Shut-down checklist

1. Turn the shower head to OFF.
2. Close the propane cylinder valve fully.
3. Allow the unit to cool.
4. Report leaks, damage, low battery, weak water flow, abnormal flame, or any unsafe condition.

USE-AT-OWN-RISK NOTICE

This outdoor shower is provided as a campsite convenience and must be used responsibly. By using the shower, campers accept all risks associated with hot water, propane appliances, slips/trips/falls, weather, misuse, failure to follow instructions, and personal medical sensitivity to heat or cold. Children must be supervised by an adult. Do not alter, move, repair, bypass, or tamper with the appliance, hose, regulator, drain, propane cylinder, or controls. The campsite owner is not responsible for injury, loss, damage, burns, scalding, fire, carbon monoxide exposure, or other harm caused by misuse, unsafe behaviour, ignored warnings, or failure to follow the manufacturer instructions. This notice is not legal advice and does not replace the manufacturer manual, posted campsite rules, or applicable law.

Emergency: 911 | Report issues to campsite owner before reuse | Follow manufacturer instructions